



# Afterglow Wireless PS3 Controller Prerequisite

This guide will show the steps in moving the battery out of the way to further repair PS3 Wireless Afterglow Controller.

Written By: Aj Coello



## INTRODUCTION

Prerequisite guide for moving the battery in a PS3 Wireless Afterglow Controller.

 
---



### TOOLS:


- [54 Bit Driver Kit](#) (1)
  - [Soldering Station](#) (1)
-

## Step 1 — Battery

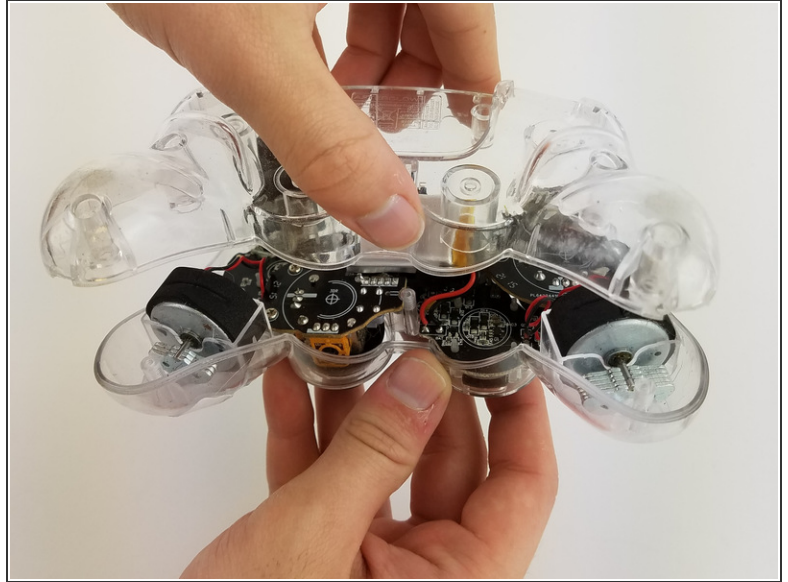

- Lay the controller face down on a flat surface and remove the seven 9mm Phillips #0 screws on the back of the controller.
- Lift up and remove the controller back plate.

## Step 2

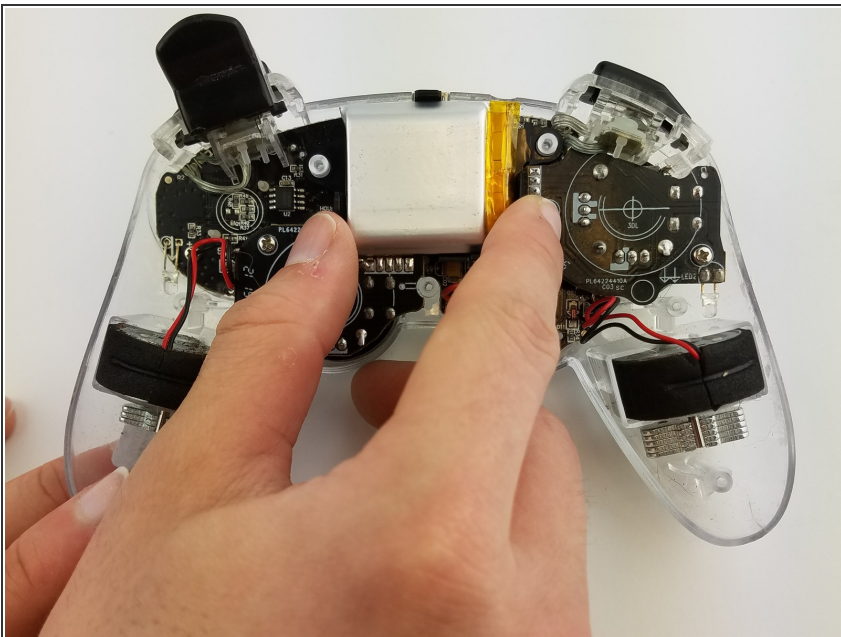

- Carefully remove the battery by lifting it straight up from its place.
- ⚠ Keep in mind that the red and black battery wires are attached to the motherboard. Handle these with care.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 02:11:01 AM.